

LiftMaster Gate Operation & Reset - December 2023

The LiftMaster gate system utilizes sensors that are embedded in our asphalt roads. If a vehicle is stopped on one of the ground sensors for more than a few minutes a safety feature will trigger the gate to remain in the open position until it times out and resets itself.

If the gate does not reset itself and doesn't close after a few minutes you should open the red box to check the power switch (it's unlocked)



The power switch can be found inside the small red box on the LiftMaster controller when you open the box



If the gate doesn't move after opening the red box and pressing the power switch, you need to look at the gray box adjacent to the LiftMaster controller.



Open the gray box and look for the **tiny black reset button**.

It's located on the lower left side in the small box as shown here.

Press the reset button and the gate should begin to close and open as normal

